 
 


RG-RSR20-X&10-X

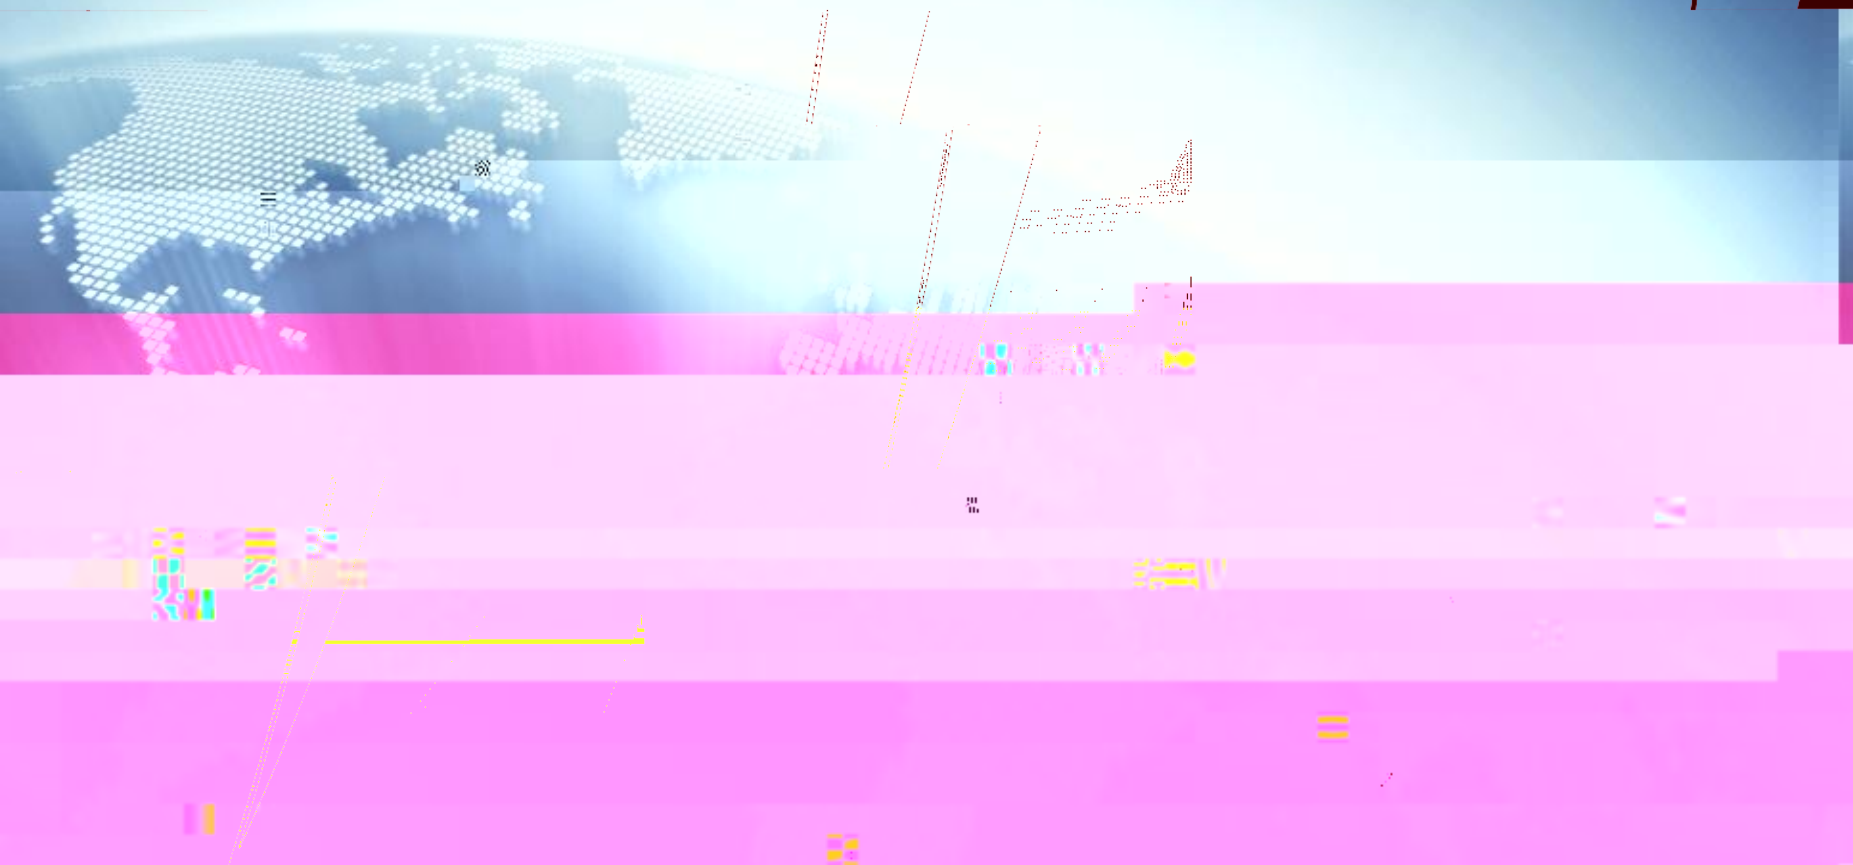

2016-08	V1.0		
2016-10	V1.1	HSIC	

Contents

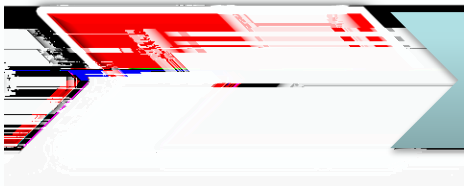

0 ~45

-40~70

10%~95%RH,

5%~95%RH,



I



19

- 1.
- 2.
- 3.

10cm



HSIC-2E1/CE1	1	HSIC(0.5U)	RSR20-X-28:slot2~5	(OFL)
HSIC-2HS	1	HSIC(0.5U)	RSR20-X-28:slot2~5	(OFL)
HSIC-4G-LTE	1	HSIC(0.5U)	RSR20-X-28:slot2~5	
RG-PA60	1	DHSIC(01U)	RSR20	





HSIC

(

HSIC

)



HSIC

SLOT2

SLOT5



HSIC

HSIC

HSIC





HSIC


1

2	RSR20-X-28 slot2~slot5	HSIC	slot 5	slot6	DSIC
	RSR10-X-07 slot2 slot3	HSIC/DHSIC		slot3	

HSIC

HSIC

 “ OFL ”

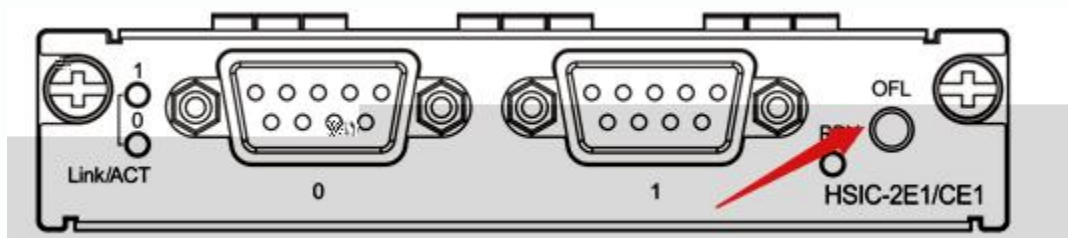

“ OFL ”

“

”





HSIC
HSIC

“ OFL ” 3s
RDY

RDY

 
SYS

I



HSIC

1

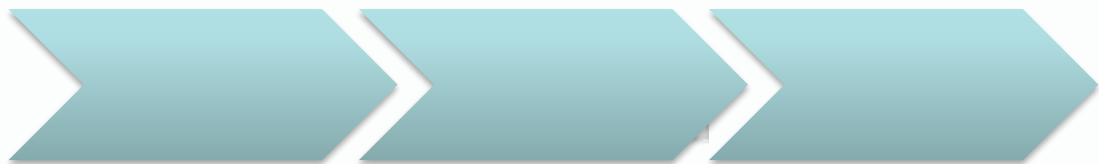


AC: 100~240V 50-60Hz

I



 (RG-PA60)

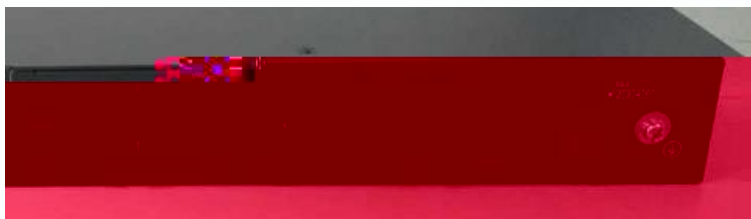

(),

 




(RG-PA60)



I

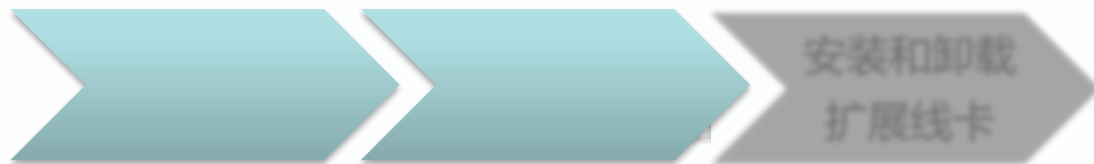

1

2

3



“ ”

“ ”

PWR

1



1.



2.





RSR20-X/RSR10-X
Console

EIA/TIA-232

	RJ-45
	EIA/TIA-232
	9600bps

Contents



“ ON ”

1

WEB

PC

Slot1

PC

RSR20-X:GigabitEthernet 1/0 ~1/23,RSR10-X:GigabitEthernet 1/0 ~1/3

PC IP

192.168.1.2~ 192.168.1.254

255.255.255.0

192.168.1.1

192.168.1.1

WEB

欢迎使用 RSR路由器 WEB管理系统

登录
请输入您的用户名和密码！

 


用户名:

密码:

登录 忘记密码怎么办?

在线客服 

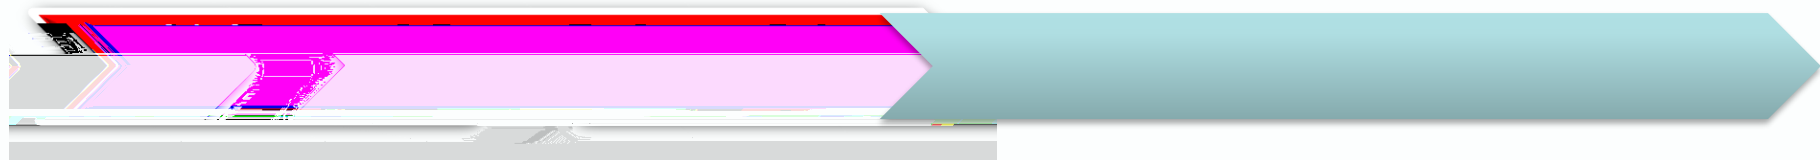

“

”

NAT

NAT

1 组网拓扑

2 配置向导

Web端口: 80 (范围为: 80, 1025-65535, 默认: 80) WEB登录端口, 建议

Telnet密码: sdhah (密码由字母、数字、下划线和横线组成) 用于telnet

192.168.1.1 上的网页显示:

保存成功!

确定

保存配置

跳转到首

10.10.2

1.1.1

AN1

192.168.1.1 - 255.255.255.0

192.168.1.1 - 192.168.1.254

192.168.1.1

配置内网接口信息

接口IP、掩码、网关地址、VLAN地址、接口描述

 
接口IP: 192.168.1.1

接口掩码: 255.255.255.0

接口网关: 192.168.1.1

接口VLAN: 1

接口描述:

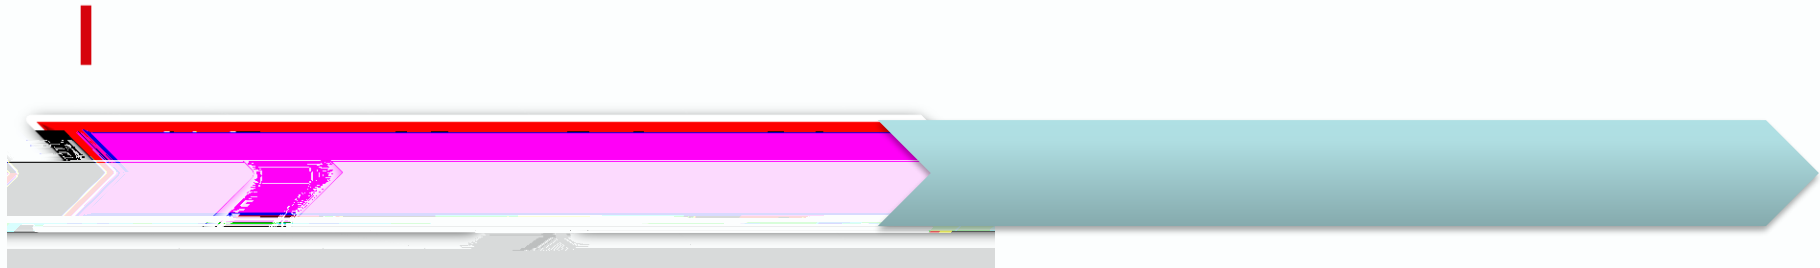

“ ” _ _ “ ”

web

telnet&ssh

修改特权密码


说明： 特权密码是指用户进入特权模式Exec配置层的口令。

	*		*
	*		*
	*		*

修改WEB密码


名称为出厂配置，此用户名不可修改！
说明： WEB用户

	*	新密码：	
	*	确认新密码：	

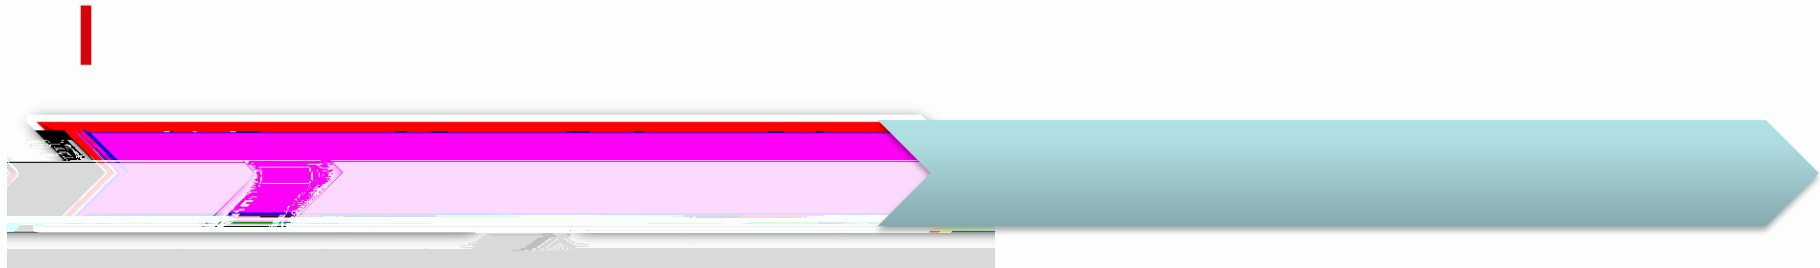 

“ ” _ “ ”

设备名称	
注意： 请勿输入问号、空格、双引号字符！	
设备名称：	Ruijie
确定修改	

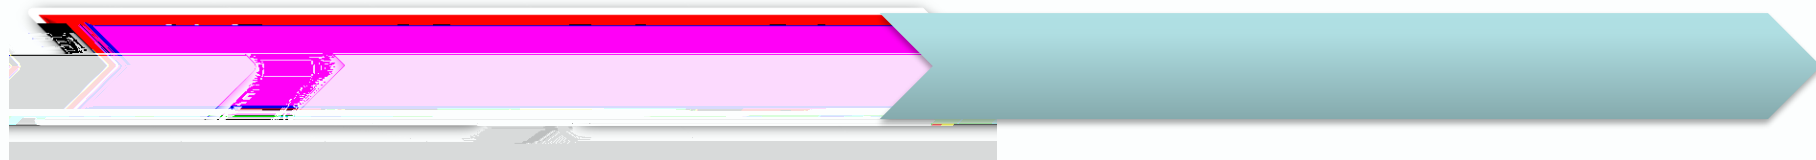 

“ ” “ ”

NTP

Internet

系统时间设置

当前时间：2016年11月30日 16:26:35

 
时区：UTC+8

设置方式：☒ 手动设置 ☐ 与Internet时间服务器同步

重置时间： 0 时 0 分


PC获取时间

保存配置 从

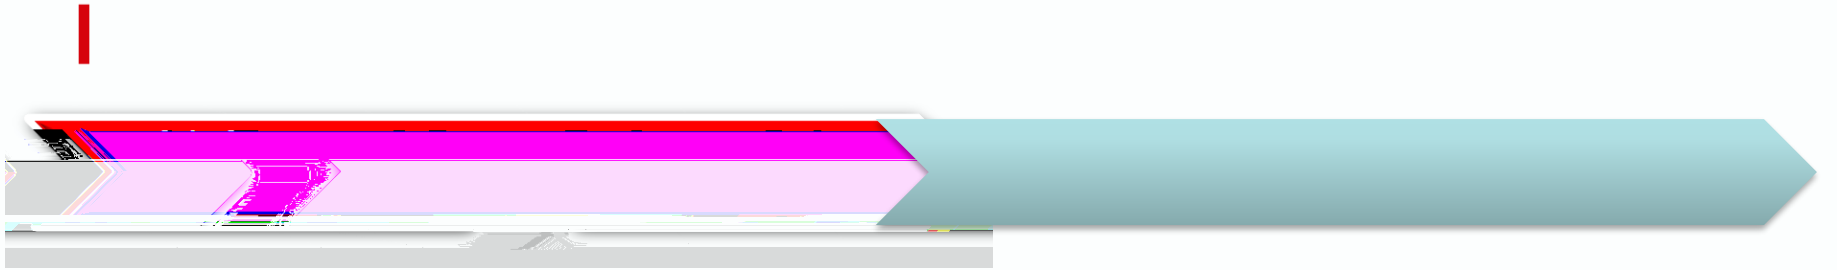

“ ” _ “ ”



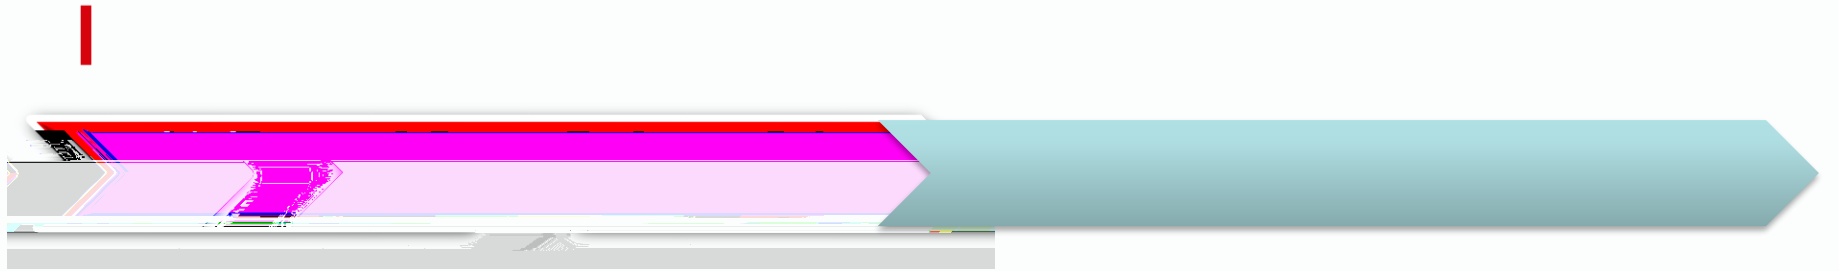 

2

CLI

RS232

Console

PC

Windows

Hyperterm()



ole


9600

8

VT100



Ruijie>	User EXEC		
Ruijie#	Privileged EXEC	enable	
Ruijie(config)#	Global configuration	terminal configure	
Ruijie(config-if)#	Interface configuration	interface	

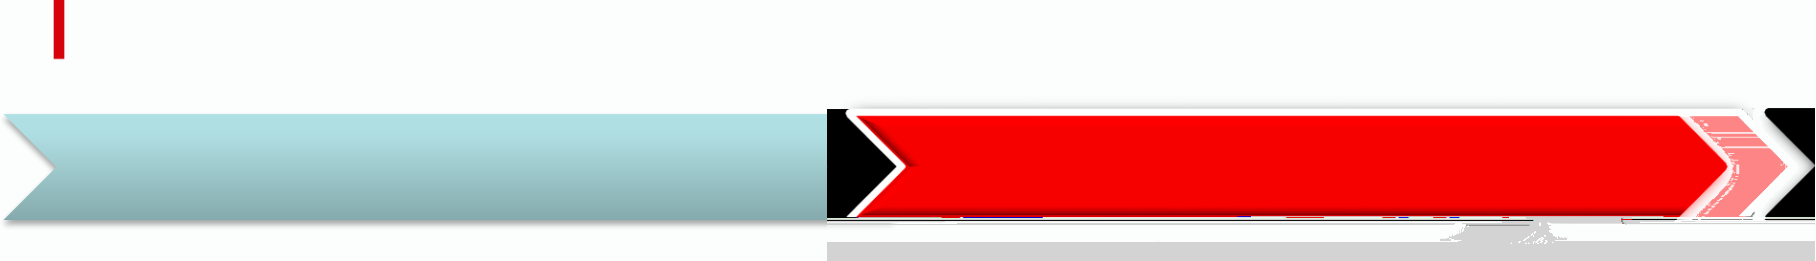 

```
Ruijie>enable //
Ruijie#config terminal //
Ruijie(config)#hostname Router // " Router "
```

enable

```
Router(config)#enable password ruijie // enable " ruijie "
```

telnet

```
Router(config)#line vty 0 4 // 0~4 VTY
Router(config-line)#password ruijie // telnet " ruijie "
Router(config-line)#login // telnet
```

IP

```
Router(config)#interface GigabitEthernet 0/0 //
```

```
Router(config-if-GigabitEthernet 0/0)#ip address 192.168.0.1 255.255.255.0 //
```

IP

Router(config)#interface vlan 1//

vlan

Router(config-if-VLAN 1)#ip address 192.168.10.1 255.255.255.0 //

vlan1

IP//

192.168.10.1

255.255.255.0

Router(config)#ip route (eougab)-135tEthannet 0/0/BT8(255.255.2)-2(.2P A/D 14>> BDC 6

www.ruijie.com.cn

www.ruijie.com.cn/service.aspx

support.ruijie.com.cn

webchat.ruijie.com.cn

4008-111-000