

RG-UAC 6000-X20ME

V1.0

2024-06-28

copyright © 2022

copyright © 2022



<http://www.ruijie.com.cn>

<http://www.ruijie.com.cn/fw/>

7*24h

<http://ocs.ruijie.com.cn>

7*24h

4008-111-000

--

 
<http://www.ruijie.com.cn/special/fw/tool/xryf/>

4008111000@ruijie.com.cn

doc@ruijie.com.cn

APP

1.



2.

1

1.1

RG-UAC 6000-X20ME

RG-UAC 6000

1.2

1.2.1

1-1




1-1

1	PWR HDD	PWR power HDD					
2	Console	console					
3	USB	USB	USB				
4	MGT	MGT1	IP	MGT2			
5		4 4 8 4 BP	8	2	4		

1.2.2

1-2

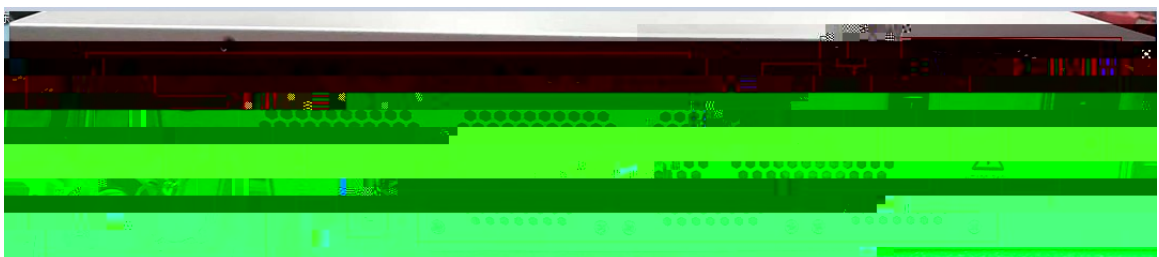

1-2

a			
b			
c			
d			
e			

2

2.1



2.1.1

19

2.1.2

2.1.3



UPS

2.1.4

2.2.5



1

2.2.6

% %

Z

...

2.2.7

2.2.8

2.3

RG-UAC 6000-X20ME

[2-4](#)

2-4

	PC



RG-UAC 6000-X20ME

2.4

RG-UAC 6000-X20ME

3



3.1

!

3.2

! !

3.3

RG-UAC 6000-X20ME

3.3.1

RG-UAC 6000-X20ME

3.3.2

- (1) 4
- (2)

1

3.5

RG-UAC 6000-X20ME

RG-UAC 6000-X20ME

100V~240V/50Hz~60Hz

1

" OFF"



4

4.1

RG-UAC 6000-X20ME

[4-1](#)

4-1

DHCP	DHCP
	https://192.168.1.200
	admin firewall
	0/MGMT

RG-UAC 6000-X20ME MGT1

PC



4.2

4.2.1

4.2.2

(1)

(2) RG-UAC 6000-X20ME

" ON"

4.2.3

4-2

PWR	
HDD	

4.3

PC https://192.168.1.200 <Enter> RG-UAC 6000-X20MEWeb



https http://192.168.1.200

5

5.1

5.1.1

5.1.2

6